

Product Usage Guide

Professional




WARNING

BC050-1



Toilets and Urinals

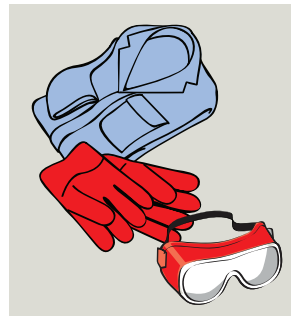


1 Use appropriate PPE as indicated in the Safety Data Sheet.



2 Place Safety Signs.



3 Flush toilet.

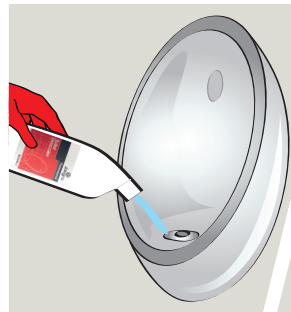

4 Push back water and apply undiluted solution to the urinal, toilet bowl and under the rim.



5 Agitate with brush if necessary.



6 Flush with clean water.



7 Remove Safety Signs.

Health & Safety

Please refer to relevant COSHH Safety Data Sheet



Scan for further product details



Not for use on stainless steel or vitreous enamel.